



# Brewing / Cleaning Guide

LCR Classic Select Roast Shelf Stable Liquid Coffee



Foodservice

Enjoy all the rich flavor you've been looking for from a liquid coffee with the added convenience and flexibility of on-demand equipment. The following step by step guide will ensure your success with the operation and maintenance of your Classic Select Roast shelf stable coffee program.

## Filling The Machine




1. Insert box into cooler with box spout cut out and instructions facing the front of the machine. Follow packaging directions:
  - 1) Remove Circle A and lift flap B (do not tear off)
  - 2) Slide bag spout into circular hole
  - 3) Lock bag spout in place with flap B



2. Remove the foil label from the spout and 1) insert **Quick-Clic** into spout until 2) it clicks with the bag spout.



3. When changing the Bag-in-Box, press the release lever on the **Quick-Clic**. Carefully remove and wipe clean. Remove the empty Bag-in-Box and replace with new Classic Select Roast product.

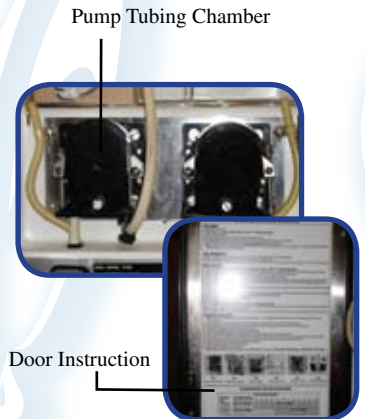

Note: If pump tubing needs to be replaced call Kraft service at 1-800-7-MAXWEL. The replacement instructions are on the interior of door.


## Brewing Guide



1. Place cup under spout and pull lever forward and hold until cup is 2/3 full. If using a portion controlled machine pull lever forward and release for preset portion.



Press White Preset Portion Button Here, If Applicable

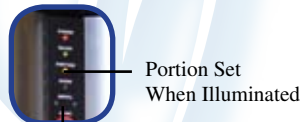

Portion Set When Illuminated



2. If using preset portion function on standard machine push preset portion button as shown above - portion light will illuminate and then pull lever forward to dispense coffee. Coffee will stop flowing once preset portion is dispensed, but if for some reason it doesn't push **Stop** button as shown.



3. Dispense hot water by pushing the yellow button until cup is full. Note: If the power is shut off temporarily and locks the machine, simply turn off the machine power switch for 30 seconds and turn it back on - if the problem does not correct itself, call for service.



# Brewing / Cleaning Guide

LCR Classic Select Roast Shelf Stable Liquid Coffee




Foodservice

## Cleaning Unit



1. Open unit door. Remove **Quick-Clic** from spout, wipe clean and place in a container of clean hot water.

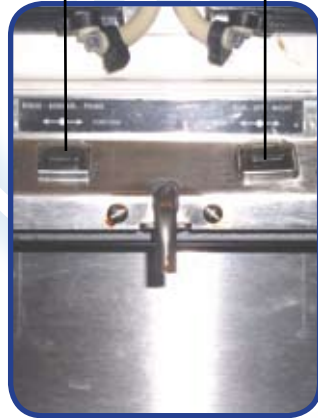

Function Selector Switch      Mode Selector Switch

2. Select **Prime** on the Function Selector Switch and make sure the Mode Selector Switch is on **Run** and close door.




3. Pull dispense handle down until hot water is clear or has no concentrate coloring in it.



Function Selector Switch

4. Open dispenser door, select **Normal** on the Function Selector Switch. Once again make sure the Mode Selector Switch is on **Run**. Close door and repeat steps 1-4 for other side.

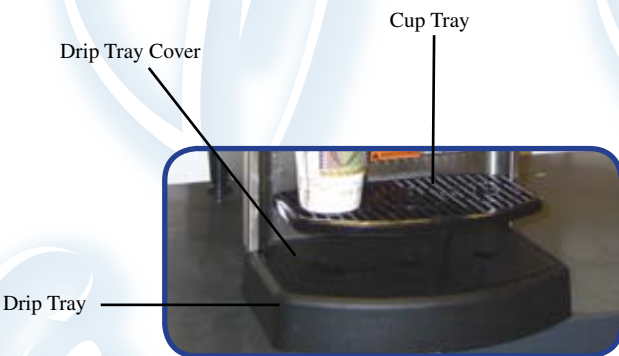

5. Remove and wash the drip tray, drip tray cover, and cup tray in a mild detergent solution. Rinse thoroughly.



Splash Panel

Dispense Nozzles

6. Wipe the splash panel, dispense nozzles, door and cabinet with a clean damp cloth.

**NOTE: Follow Weekly Sanitizing Guide Instructions On Inside Of Door**

For Service Call Kraft: 1-800-7-MAXWEL